

# sno-kone machine

Instruction Manual



## installation

### machine description

- The sno-kone machine is an automatic shaver with a tremendous capacity. You will find that it keeps up with any demand; as soon as you put ice into the hopper, it's shaved into small ice chips. The sno-kone machine consists of the hopper, which houses the cutter head, the pusher handle, the motor and the display case.

### electrical requirements

- The sno-kone machine operates on 120v / 15amp, single phase, 60 cycle AC current.

### ice requirements

- The sno-kone machine can take ice cubes or block ice, if you wish to break the block into pieces approximately 3 to 4" inches in size
  - The ice will not entire the shaving chute if the pieces are too large.

## machine operation

- *Never allow any foreign or metallic objects around the shaver area of the sno-kone. Ice picks, scoops and debris that may be in the ice often damages blades.*

### to operate the sno-kone machine

1. Fill the hopper to within an inch of the top with ice cubes or block ice (no larger than 3" to 4"). The larger the pieces, the better the snow.
2. Switch the motor on. Wait for the motor to come to full speed (approx 1 min)
3. Push the pusher handle down against the ice in the hopper. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the shaver head. You may find that you need to relieve the pressure two or three times in a cycle. Too much pressure will result in snow that is course; too little pressure will make the snow mushy.